


Installation Instructions for: LS Coolant Crossover Kit

Read All of the Instructions Before Beginning the Installation.

To get the most out of your LS Coolant Crossover Kit, follow these installation recommendations:
Note – This kit is equipped with all the necessary hardware to complete a 4 corner crossover.

Mounting Instructions:

1. The first step is to locate your 4 steam holes on the cylinder head, and mount the 4 steam hole fittings provided. **NOTE:** Cap screws and o-rings provided.
2. Once this is complete you will need to determine how you will plumb your kit. Provided “T” fitting will be located at the back of the engine, and provided 4-port fitting will be located at the front of the engine.
3. Once you have determined how your hoses will route then measure and cut the lengths of hose that you will need to make the four connections.
4. Install AN fitting on the cut pieces of hose. **NOTE:** There are extra fittings provided with kit.
5. Install all pieces of hose and tighten connections.
6. **NOTE:** 4-port fitting will have a cap for the extra port. This port is installed in case you would like to plumb your kit all the way back to either your water pump or radiator.

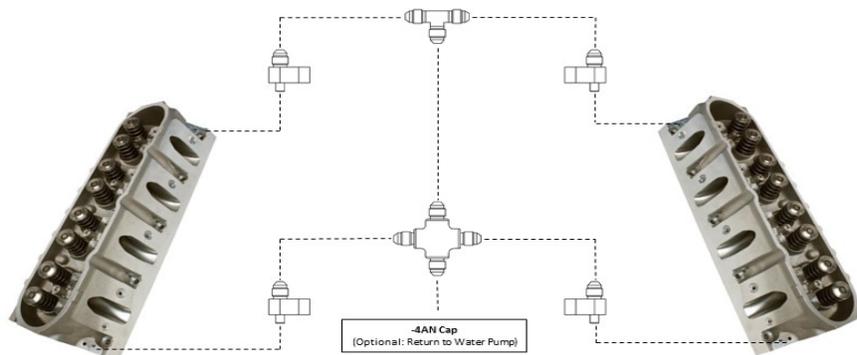

Parts List:

- (4) ft. of #4AN Hose
- (6) #4AN Straight Hose Ends
- (4) #4AN 90-Degree Hose Ends
- (4) Steam Hole Fittings
- (4) #011 O-Rings
- (1) #4AN Male Tee Flare Fitting
- (1) #4AN Male 4-Port Flare Fitting
- (1) #4AN Female Cap
- (4) M6 – 1.0 x 20mm Stainless Steel Socket Head Cap Screws



215-969-3550

www.prpracingproducts.com

www.facebook.com/prpracingproducts

