


# Installation Instructions for PRP-8151 BB-Chevy Low-Mount Alternator Kit

For Alternators: Jegs 555-10173 & ECAE 358-2002, 358-2009

<b>PRP-8151</b>			
<b>Description</b>	<b>QTY</b>	<b>10173</b>	<b>2002-2003</b>
Bracket - Alt Mount - BBC - LH/RH - Lrg	1	X	X
Bracket - Alt Mount - BBC - LH/RH - Sml	1	X	X
Spacer – 1.250" - 0.469 ID	2		A
Spacer – 0.875" - 0.469 ID	2		B
Spacer – 0.125" - 0.469 ID	2	C	
Spacer – 2.000" - 0.469 ID	2	D	
7/16"-14 x 3-3/4" Bolt	2	X	X
3/8"-16 x 2-1/2" Bolt	1	X	X
M8 x 35 Bolt	1	X	X
7/16" Flat Washers	2	X	X
3/8" Flat Washers	2	X	X
7/16" Lock Washers	2	X	X
M8 Nut	1	X	X
3/8" Lock Nut	1	X	X
5/16" Flat Washers	2	X	X

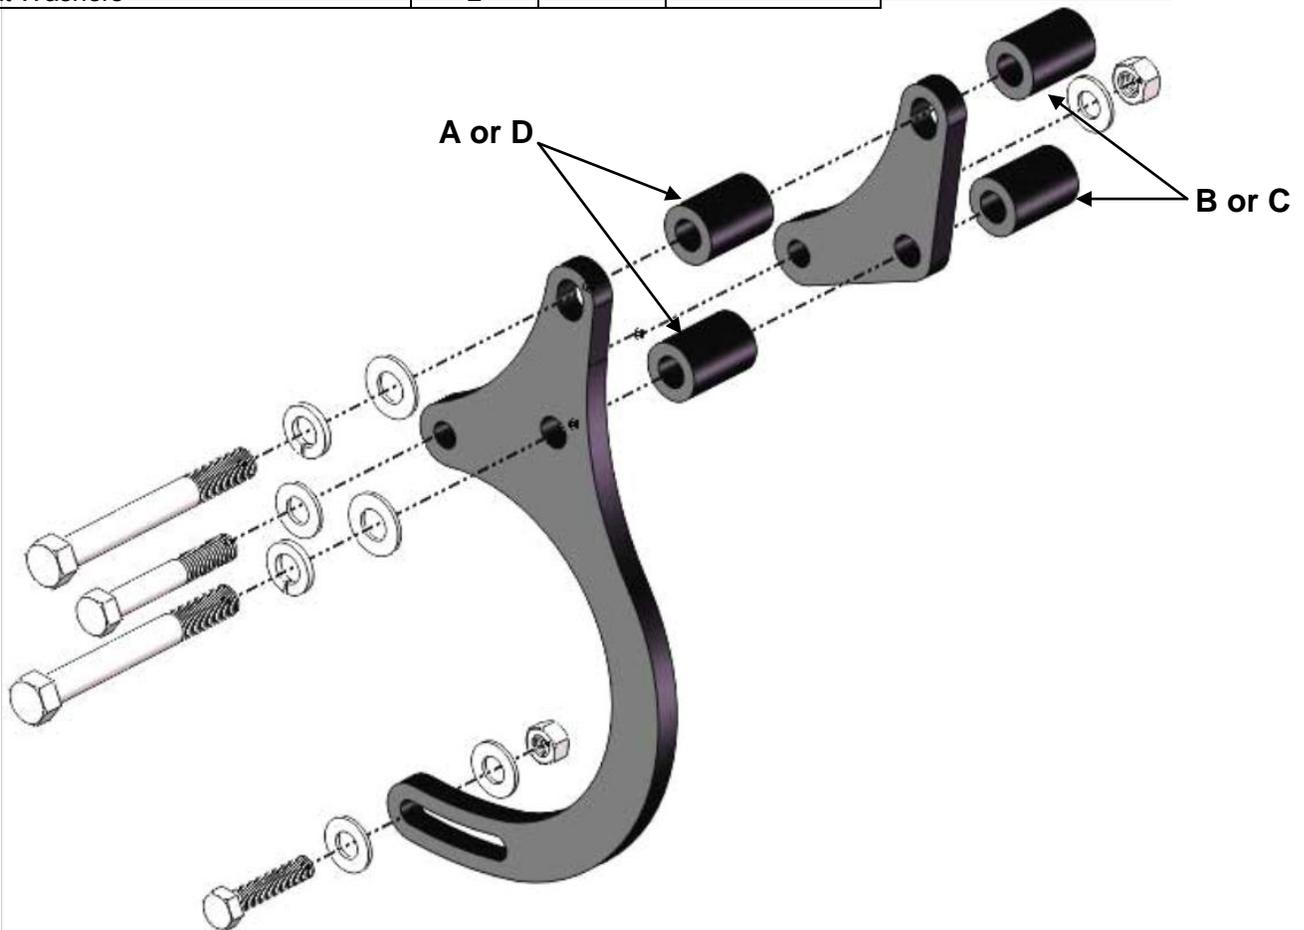

215-969-3550  
[www.prpracingproducts.com](http://www.prpracingproducts.com)  
[www.facebook.com/prpracingproducts](https://www.facebook.com/prpracingproducts)

