


Installation Instructions for PRP-8152


SB/BB-Chevy Low-Mount Alternator Kit

For Alternators: Jegs 555-10170 & ECAE 358-2025/358-2026

PRP-8152					
Description	QTY	SB-Chevy		BB-Chevy	
		10170	2025/2026	10170	2025/2026
Bracket - Alt Mount - SBC/BBC LH	1	X	X	X	X
Spacer – 2.570" - 0.386 ID	2	A	A		
Spacer – 0.940" - 0.386 ID	1	B	B		
3/8"-16 x 3-3/4" Bolt	2	C	C		
Spacer - 2.570" - 0.469 ID	2			D	D
7/16"-14 x 3-3/4" Bolt	2			E	E
7/16" Lock Washer	2			F	F
M8 x 50 Bolt	1	X	X	X	X
5/16" Lock Washer	1	X	X	X	X
3/8"-16 x 2" Bolt	1	X	X	X	X
3/8" Lock Washers	3	X	X	X	X
3/8" Flat Washer	2	X	X	X	X
3/8" Nut	1	X	X	X	X

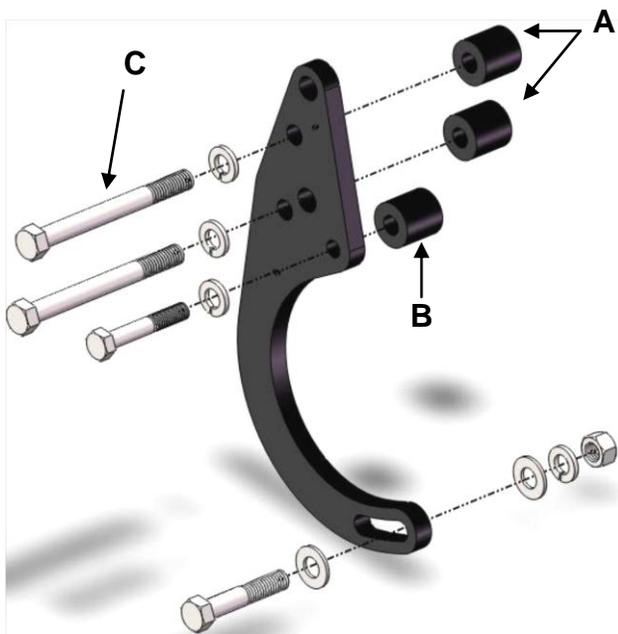

Small Block

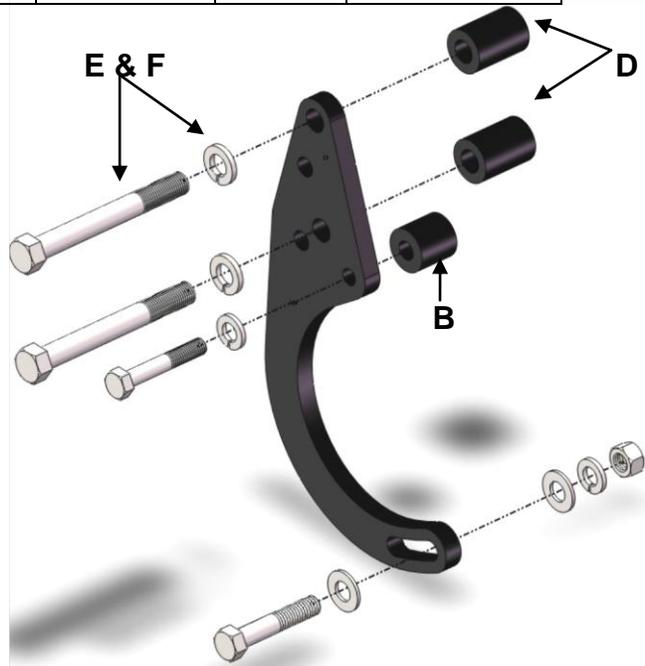

Big Block



215-969-3550

www.prpracingproducts.com
www.facebook.com/prpracingproducts

