


Installation Instructions for PRP-8153

BB-Chevy Low-Mount Alternator Kit

For Alternators: Jegs 555-10160 & ECAE 358-2001, 358-2007, 358-2009

PRP-8153			
Description	QTY	10160	2001/2007/2009
Bracket - Alt Mount - BBC - LH/RH - Lrg	1	X	X
Bracket - Alt Mount - BBC - LH/RH - Sml	1	X	X
Bracket - Alt Mount - BBC - LH/RH - Spacer	1	X	X
Spacer - 2.000" - 0.469 ID	2	X	X
7/16"-14 x 3-3/4" Bolt	2	X	X
3/8"-16 x 3" Bolt	1	X	X
5/16"-18 x 1" Bolt	1	X	X
7/16" Lock Washers	2	X	X
7/16" Flat Washers	2	X	X
3/8" Lock Washers	1	X	X
3/8" Lock Nut	1	X	X
5/16" Flat Washer	1	X	X

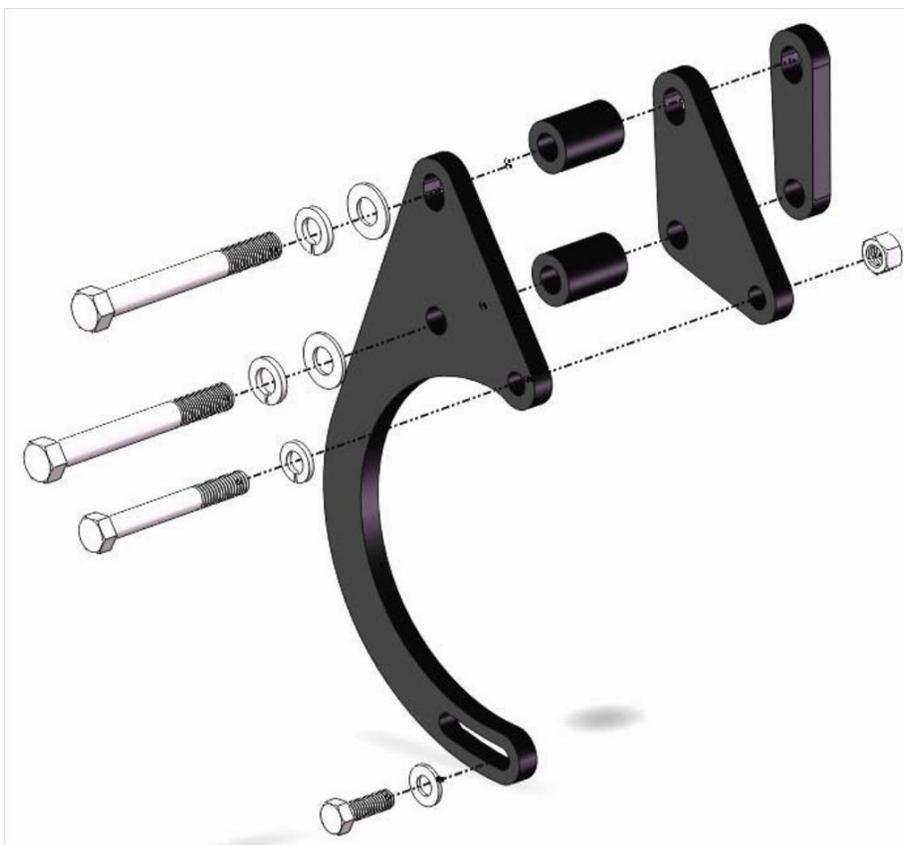

215-969-3550

www.prpracingproducts.com
www.facebook.com/prpracingproducts

