


Installation Instructions for PRP-8156

BB-Chevy Mid-Mount Alternator Kit

For Alternators: Jegs 555-10172 & ECAE 358-2002

PRP-8156			
Description	QTY	10172	2002
Bracket - Alt Mount - BBC Mid - LH Lrg	1	X	X
Bracket - Alt Mount - BBC Mid - LH Sml	1	X	X
Spacer – 1.250" - 0.469 ID	2		A
Spacer – 0.875" - 0.469 ID	2		B
Spacer – 2.000" - 0.469 ID	2	C	
Spacer – 0.125" - 0.469 ID	2	D	
7/16"-14 x 3-3/4" Bolt	2	X	X
3/8"-16 x 2-1/2" Bolt	1	X	X
M8 x 35 Bolt	1	X	X
7/16" Flat Washers	2	X	X
7/16" Lock Washers	2	X	X
5/16" Flat Washers	2	X	X
M8 Nut	1	X	X
3/8" Nylock Nut	1	X	X
3/8" Flat Washers	2	X	X

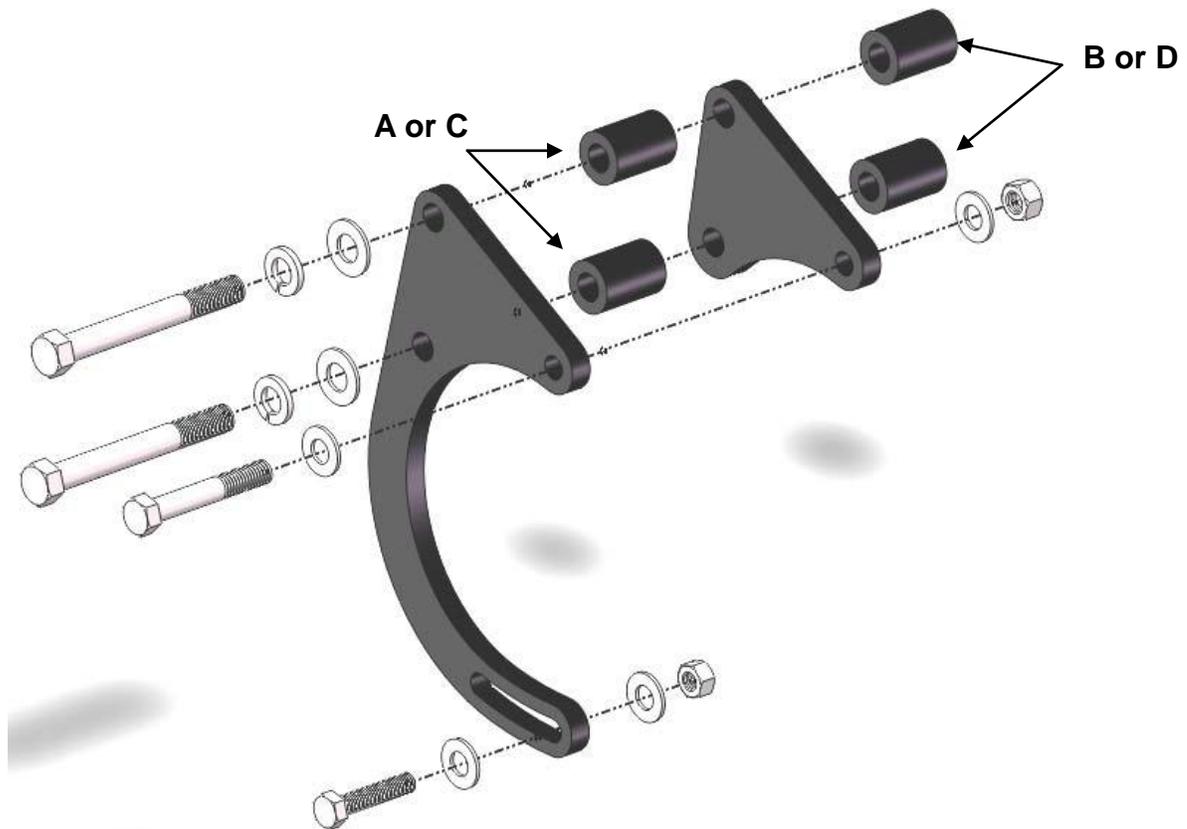

215-969-3550

www.prpracingproducts.com
www.facebook.com/prpracingproducts

